


FOREVERSEAL FOAM PAD HOOD (FPH) DOCK SEAL REPLACEABLE WEAR PLEATS INSTALLATION INSTRUCTIONS



(Right or left — read from outside facing building)

PARTS LIST

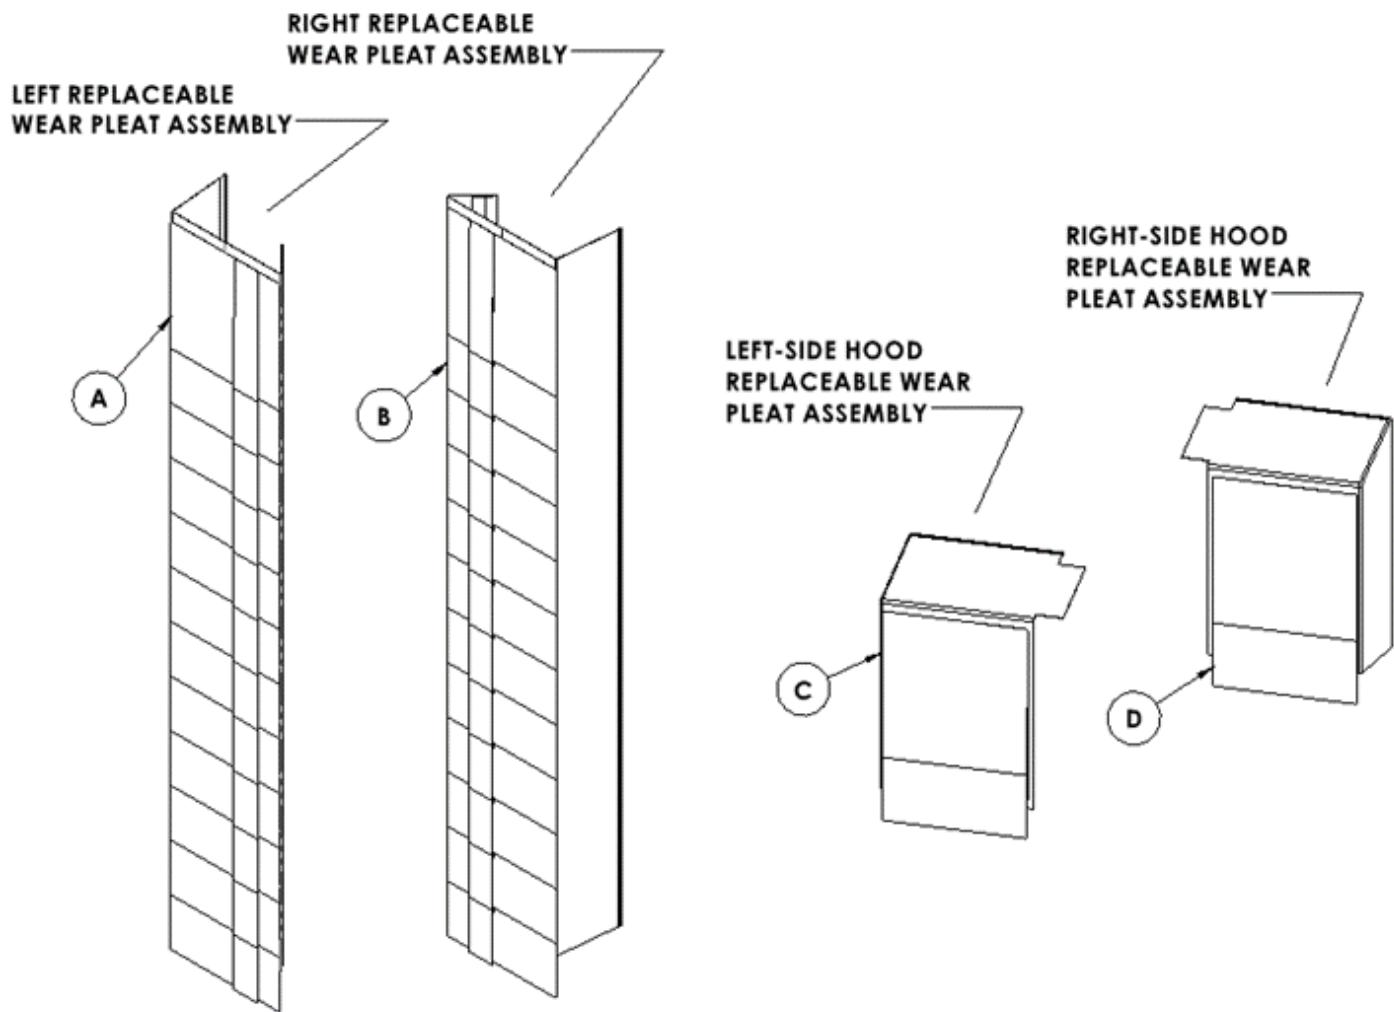

ITEM NO.	DESCRIPTION	QTY
A	LEFT REPLACEABLE WEAR PLEAT ASSEMBLY	1
B	RIGHT REPLACEABLE WEAR PLEAT ASSEMBLY	1
C	LEFT-SIDE HOOD REPLACEABLE WEAR PLEAT ASSEMBLY	1
D	RIGHT-SIDE HOOD REPLACEABLE WEAR PLEAT ASSEMBLY	1


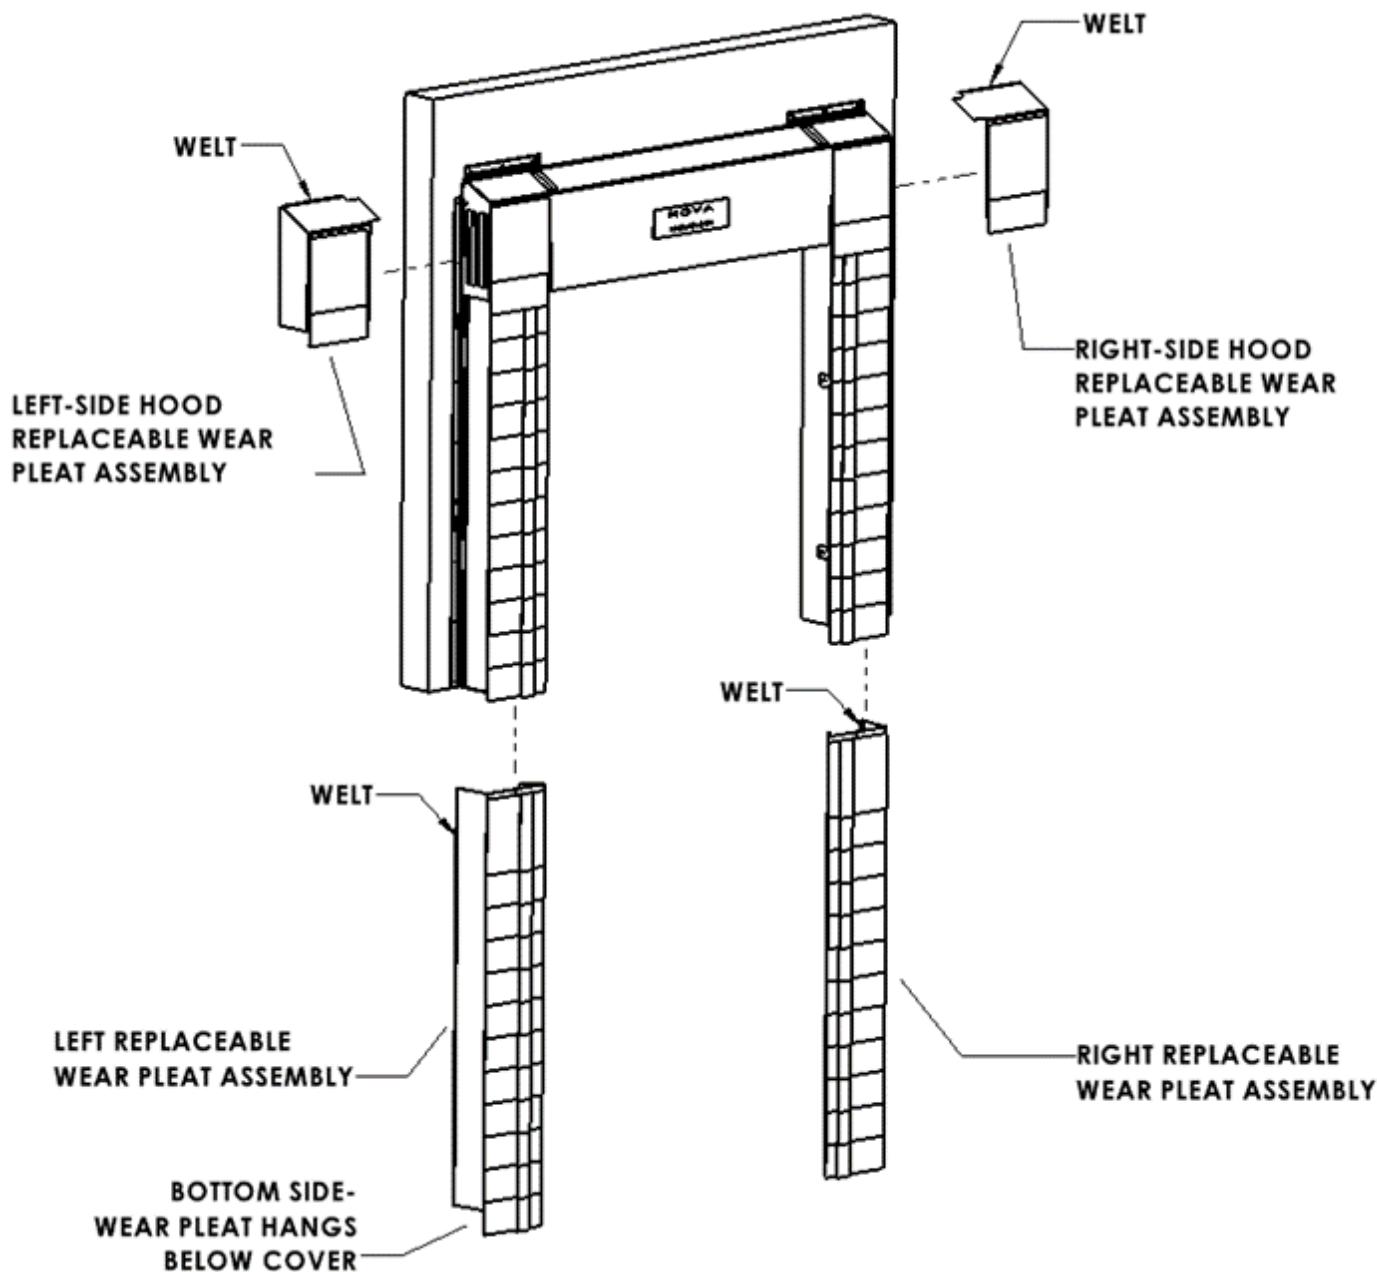


FIGURE 1

1. INSTALL RIGHT REPLACEABLE WEAR PLEAT ASSEMBLY (B) ON THE RIGHT-SIDE PAD:

- a. Open the Velcro® flap on the inside of the Right-Side Pad Assembly.
- b. To expose the Velcro®, pull the Velcro® flap back and use masking tape to secure the flap open.
- c. Take the Right Replaceable Wear Pleat Assembly (B) and slide the welt side up into the bottom of the Long Bracket opening (Figure 1, Figure 2, Figure 3 & Figure 4). Slide it upward until the bottom Wear Pleat on the Right Replaceable Wear Pleat Assembly is aligned directly in front of the bottom Wear Pleat on the Right-Side Pad.

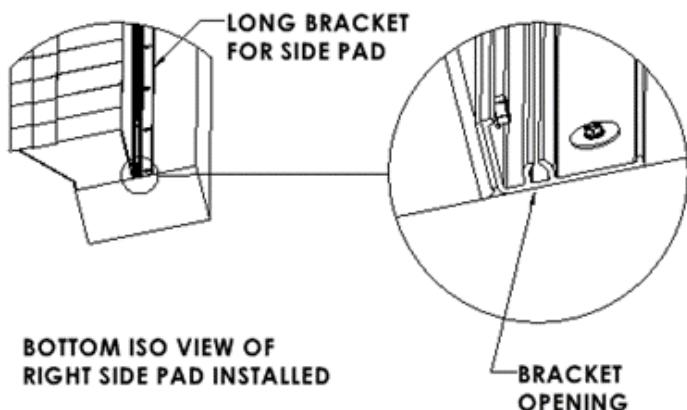

BOTTOM ISO VIEW OF
RIGHT SIDE PAD INSTALLED

FIGURE 2

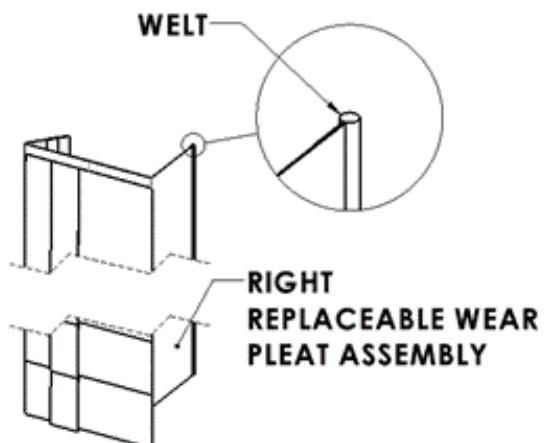


FIGURE 3

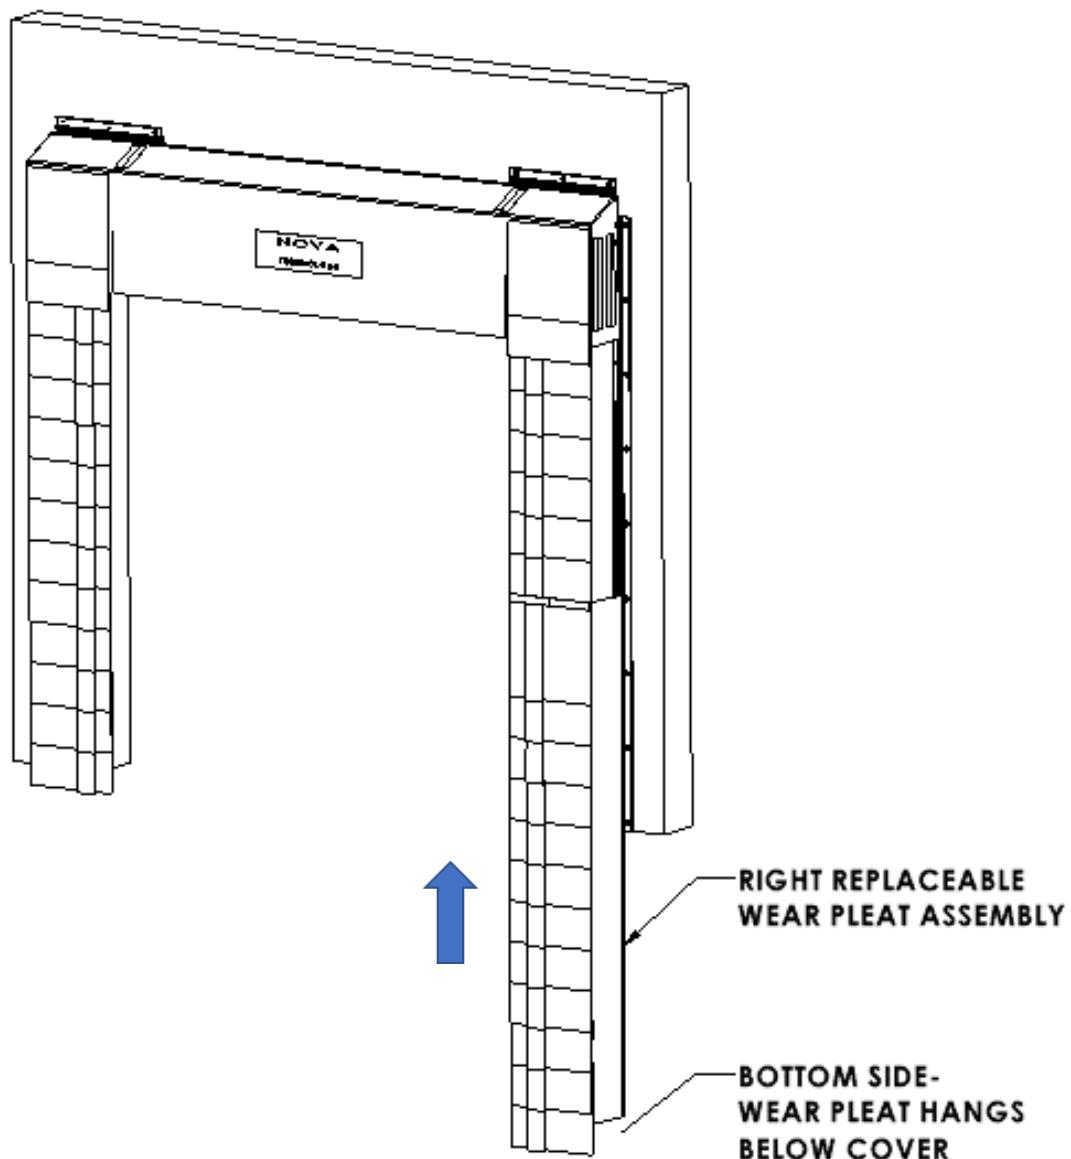


FIGURE 4

- d. Ensure to tuck the top end of the Right Replaceable Wear Pleat Assembly (B) under the bottom end of Hood.
- e. Once the Right Replaceable Wear Pleat Assembly (B) is in vertical position, pull the Velcro® side outward (away from the building) and then wrap it tightly around the side pad. Then, secure the Velcro® on Right Replaceable Wear Pleat Assembly to the Velcro® on the inside face of the side pad.
- f. Once the Right Replaceable Wear Pleat Assembly (B) is firmly secured, remove the tape from the Velcro® flap on the Right-Side Pad and fold the Velcro® flap back onto the top of the Right Replaceable Wear Pleat Assembly.

2. INSTALL LEFT REPLACEABLE WEAR PLEAT ASSEMBLY (A) ON THE LEFT-SIDE PAD: Repeat Step 1 process for installing the Left Replaceable Wear Pleat Assembly (A).

3. INSTALL THE RIGHT-SIDE HOOD REPLACEABLE WEAR PLEAT ASSEMBLY (D) ON THE RIGHT END OF THE HOOD:

- a. Remove the 2 pieces of Velcro® Loop on the top of the Hood.

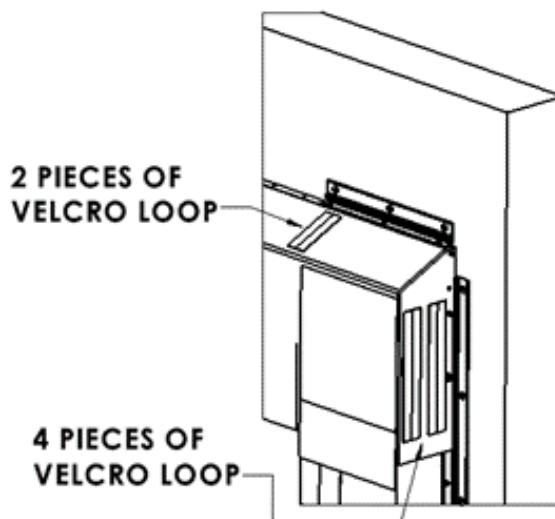


FIGURE 5

- b. Remove the 4 pieces of Velcro® Loop on the right end of the Hood.
- c. Take the Right-Side Hood Replaceable Wear Pleat Assembly and insert the welt horizontally into the outer end of the Short Seal Bracket w/Seal (Figure 6).

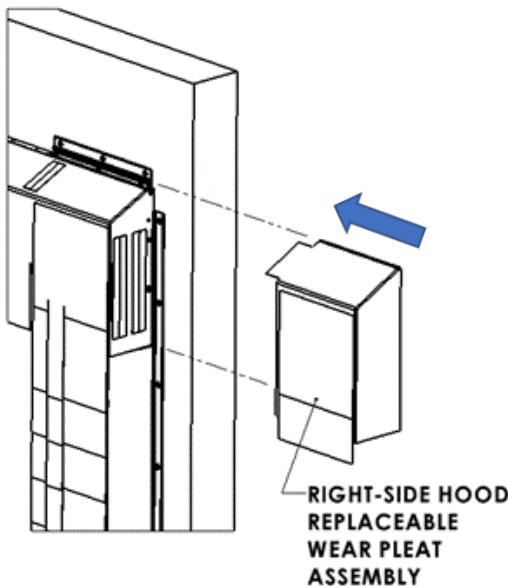


FIGURE 6

- d. Pull the Right-Side Hood Replaceable Wear Pleat Assembly (D) inward (toward the center of the Hood) until the end comes in contact with the end of the Hood (Figure 7).

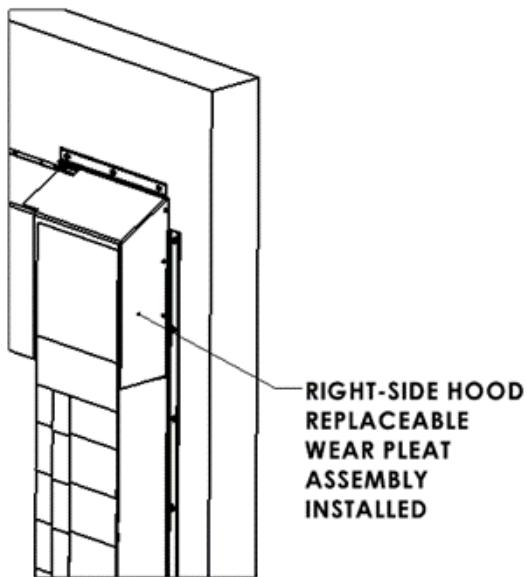


FIGURE 7

- e. Firmly press the end of the Right-Side Hood Replaceable Wear Pleat Assembly (D) so the end Velcro® firmly attaches to the Velcro® on the end of the Hood.
- f. Next secure the Velcro® on top of the Hood.

- 4. INSTALL THE LEFT-SIDE HOOD REPLACEABLE WEAR PLEAT ASSEMBLY (C) ON THE LEFT SIDE OF THE HOOD:** Repeat Step 3 for the installation of the Left-Side Hood Replaceable Wear Pleat Assembly (C).



W141N9240 Fountain Blvd Menomonee Falls, WI 53051
Phone 262-502-1591 | 800-236-7325
www.novalocks.com