


# NOVA SEAL PULL ROPE SYSTEM

## INSTALLATION INSTRUCTIONS

### OPTIONAL SEAL PULL ROPE SYSTEM

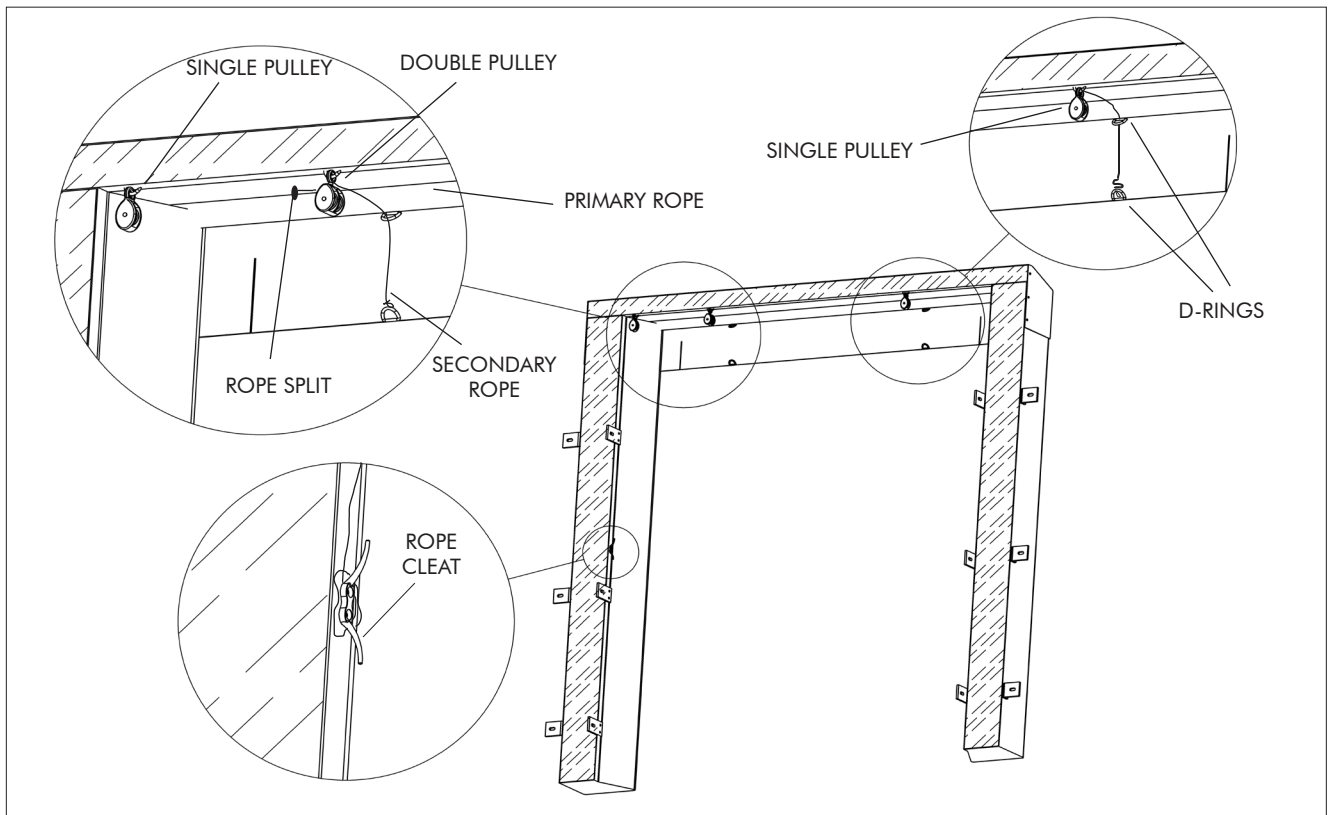

- 1. DETERMINE SIDE TO USE PULL-ROPE SYSTEM:** Either left or right side is acceptable.
- 2. MOUNT ROPE CLEAT:** Use screws to attach the rope cleat to the inside face of the side pad wood at about chest level.
- 3. ATTACH FIRST PULLEY:** On the same side as the rope cleat use a screw-hook to mount a single rope pulley 2 inches away from the side pad and on the bottom of the hood wood backer.
- 4. ATTACH SECOND PULLEY:** Locate the nearest D-rings to the rope cleat side and mount a double rope pulley directly behind them on the bottom of the wood backing.
- 5. ATTACH THIRD PULLEY:** Locate the remaining D-rings and mount a single rope pulley directly behind them on the bottom of the wood backing.
- 6. THREAD THE SECONDARY ROPE TO THE D-RINGS:** Locate the "rope split" fasteners on the rope and place

this in-between the single and double pulley closest to the cleat side. Thread the double rope section through the double pulley with the secondary rope closest to the drop curtain. The secondary rope threads through the nearest upper D-ring and ties into the lower D-ring.

- 7. THREAD THE PRIMARY ROPE TO THE D-RINGS:** The primary rope threads through the double pulley and through the single pulley furthest from the cleat side. It then threads through the remaining upper D-ring and ties to the lower D-ring.

**NOTE:** When the rope ends are tied to the D-rings make sure the "rope split" section sits about 1" behind the double pulley and has equal tension between the two splits.

- 8. THREAD THE REMAINING ROPE TO THE ROPE CLEAT:** The remaining rope threads through the single pulley near the cleat side and ties onto the cleat.

